

'AF' SIDE PANEL FITTING INSTRUCTIONS

(Use these Instructions in conjunction with the Door Instructions)

1. Ensure the shower tray is level and check adjustment sizes given are correct for fitment to tray. Care must be taken when drilling the wall to avoid hidden pipes or electrical cables (Fig 1).
2. Fix the corner post to the side panel using the 10mm grub screws. (Fig 2) (DO NOT OVERTIGHTEN). Fix the side panel onto the front frame using the corner post as a guide (Fig 3).

ENSURE THAT ANY LOGO IS TO THE INSIDE OF THE ENCLOSURE

4. Mark and drill two 3.2mm holes 150mm from the top & bottom of the corner post, through both sections ensuring everything is square and plumb. Screw together using the 10mm screws making sure that the collars are in place (Fig 4).
5. Slide the wall post onto the wall sides of the frame and side panel. Carefully lift the frame into position ensuring everything is plumb and level. Mark the wall for the fixings, remove the frame and drill for wall plugs supplied with the door. Fix to wall using the 30mm screws ensuring the screws collars are fitted. Taking care not to scratch the unit, mark and drill through the wall post and frame two 3.2mm holes 150mm from the top & bottom on the inside of the enclosure. Secure using the 10mm screws placing the screw collars on first (Fig 5).
6. Finish off by fitting the screw cover caps and run a bead of silicone around the outside edge of the side panel to seal the outside of the unit (Fig 6). Fit the snap to fit cover caps onto the top edges of the wall posts. Some trimming may be required.

Fig. 1



Fig. 2



Fig. 3

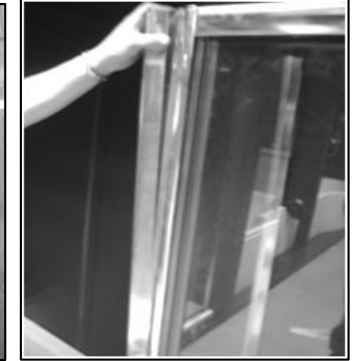


Fig. 4



Fig. 5










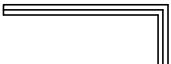
Fig. 6

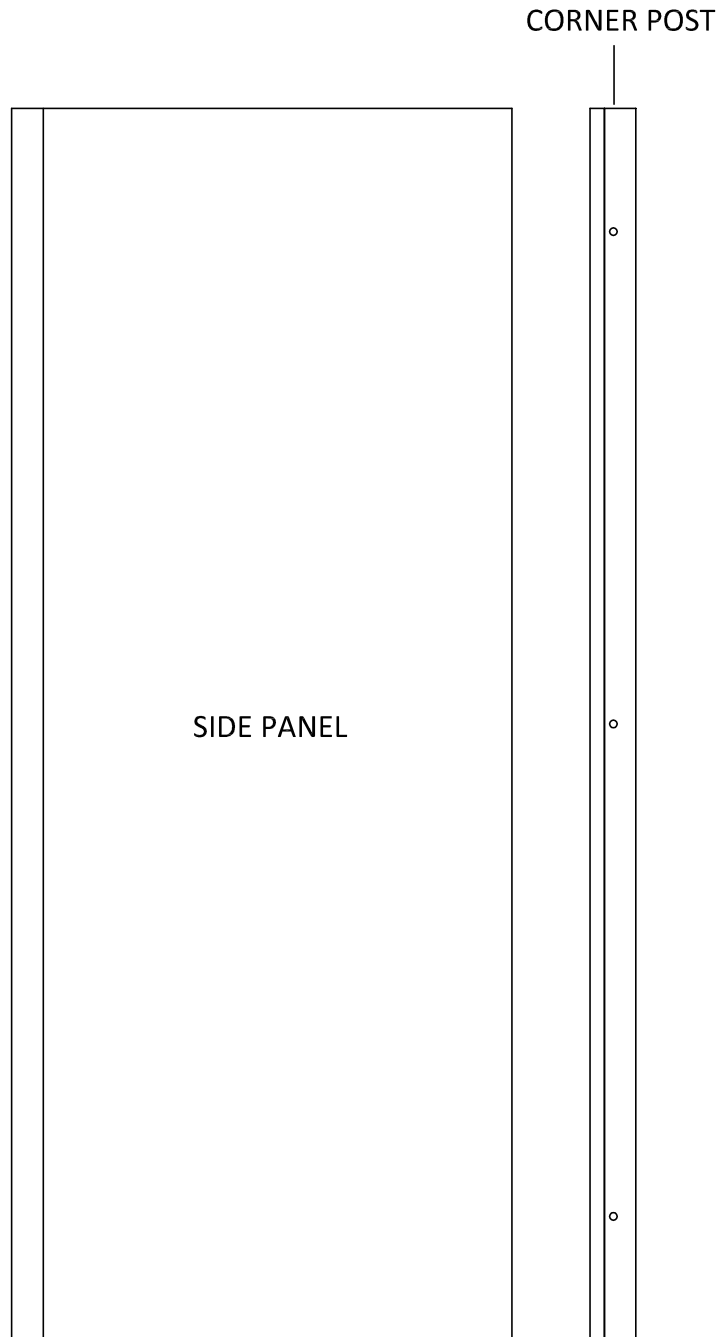

DO NOT SEAL ON THE INSIDE OF THE ENCLOSURE

AF SIDE PANEL FITTING INSTRUCTION

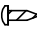

AF SIDE PANEL PARTS LIST		
	SCREW COLLAR	2
	SCREW COVER CAP	2
	10 mm SCREWS	2
	WALL POST COVER CAP	1
	10 mm GRUB SCREWS	3
	GRUB SCREW CAPS	3
	ALLEN KEY	1