


# CONCEALED CISTERN ASSEMBLY INSTRUCTION

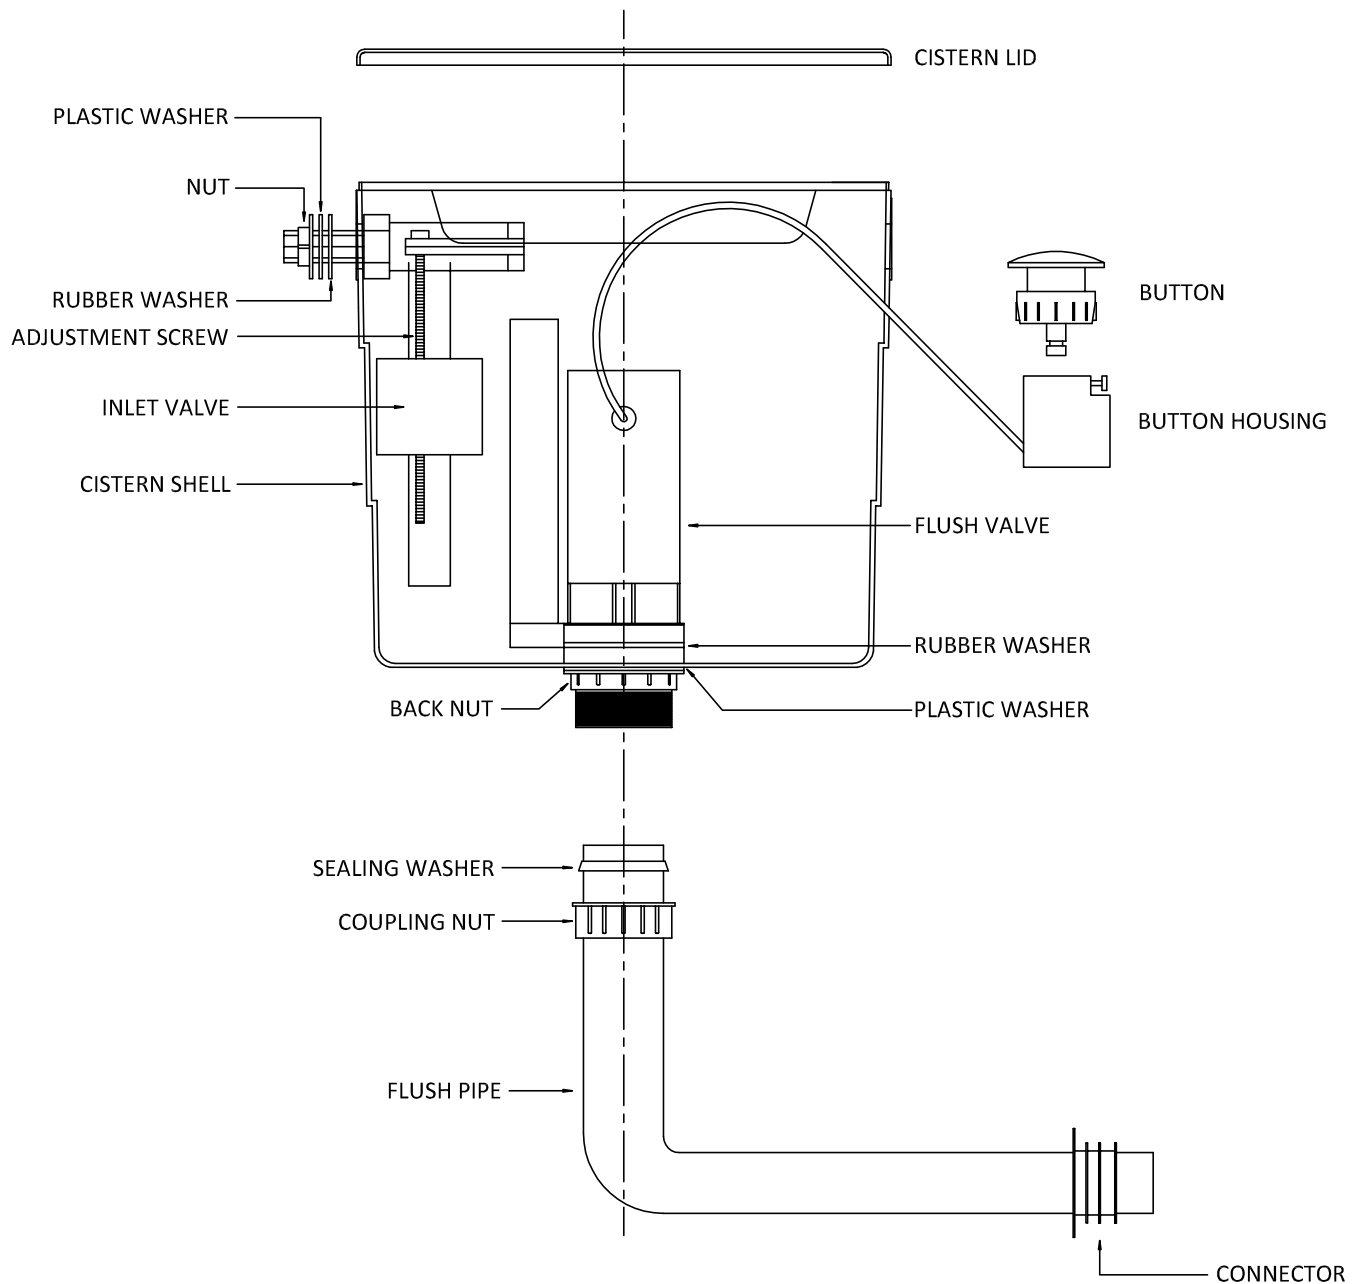

**ASSEMBLE THE CISTERN AS ABOVE AND MARK THE POSITION OF WHERE THE CISTERN IS TO BE FITTED. USE THE BRACKET AND FIXING HOLES TO FIX THE CISTERN INTO THE W.C UNIT OR WALL CAVITY.**

**MARK OUT THE SIZE THAT THE FLUSH PIPE NEEDS TO BE AND TRIM USING A FINE TOOTHED SAW. CONNECT THE FLUSH PIPE TO THE CISTERN USING THE COUPLING NUT AND WASHER.**

**MARK THE POSITION OF THE BUTTON ON THE FRONT TOP FASCIA OF THE W.C UNIT OR DUCTING. ENSURE THAT THERE IS ENOUGH ROOM FOR THE BUTTON HOUSING BEHIND THE FASCIA. FIX THE BUTTON INTO POSITION BY TIGHTENING THE BACK NUT. CLIP THE BUTTON HOUSING ONTO THE BUTTON ENSURING THAT THE CABLE IS NOT KINKED OR BENT.**

**THE WATER LEVEL IN THE CISTERN CAN BE SET BY TURNING THE ADJUSTING SCREW ON THE INLET VALVE.**

**CONNECT THE W.C PAN AND FIX ACCORDING TO THE MANUFACTURERS INSTRUCTIONS.**